

ALPHA-BLAZE LIGHTED NOCK INSTALLATION (HEA-379.3):

Prior to installing the Alpha-Blaze Lighted Nock, you must have a TenPoint HP Aluminum Bushing installed in your arrow shaft(s). Please reference the chart below if you need to purchase HP Aluminum Bushings.

CAUTION: Do NOT insert an Alpha-Blaze Lighted Nock in a standard polymer receiver or you will permanently damage the lighted nock and will potentially damage your crossbow if you shoot it.

ARROW	HP ALUMINUM BUSHING PART #	ARROW INSIDE DIAMETER
EVO-X CenterPunch 16" & 20"	HEA-3481.12	.297
TenPoint Pro Elite 400 & WR Match 400	HEA-3482.12	.300
Wicked Ridge XX75	HEA-3483.12	.305

Note: If you install the HP Aluminum Bushing yourself, you must ensure it is oriented and installed properly, per the instructions in the package.

ALPHA-BLAZE LIGHTED NOCK OPERATION:

The Alpha-Blaze Lighted Nock is a one-piece Nock/LED unit that indexes with the vanes and press fits into the arrow's HP Aluminum Bushing.

Note: These lighted nocks ONLY work in arrows equipped with a TenPoint HP Aluminum Bushing.

1. Properly align the nock's raised line indexing feature with the odd colored vane on your arrow (as shown below) and insert the nock into the HP Aluminum Bushing.

Note: Once installed, the nock is not meant to be removed from the bushing.

INSTALLED



2. Upon firing the crossbow, the bow string pushes the nock fully into the bushing and activates the LED light.

ACTIVATED



3. To deactivate the lighted nock, grip the nock and pull straight out with your fingers or Bednar Perfect Puller (sold separately) until the LED light turns off. The LED light lasts for approximately twenty-four hours when activated.

Note: Do NOT twist the nock while pulling it out.

DEACTIVATED



Remember, ALWAYS check the alignment of the vane in the bow (ensuring the odd vane is positioned down) and make certain that the arrow is properly seated (all the way back against the string). Inspect the nock and shaft for damage prior to each shot.

CAUTION: Contains a Lithium Battery. Do not disassemble or incinerate. Keep out of reach of children and pets. Contact Poison Control Center if swallowed. Recycle or dispose of properly.

* All TenPoint and Wicked Ridge crossbows require the use of an Alpha-Nock Arrow. Failure to do so will void the manufacturer's warranty.



SCAN CODE
to View Instructional Videos