Claw and Strap Replacement (HCA-432)

- 1. Layout contents (photos 1a & 1b):
 - a. (1) Claw with strap attached
 - b. (2) 8x32 Button-head cap screws
 - c. (2) Star washers
 - d. (2) Dowell pins (may not be needed)
 - e. (2) Clear friction washers

*Additional tools required: 3/32" Allen wrench

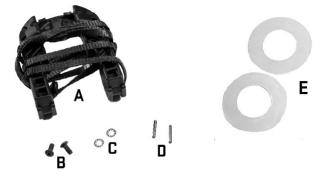


Photo 1a

Photo 1b

2. Extend de-cocking claw & strap all the way out, tighten knob, then attach to bowstring (photo 2). Note: there will be slack in the strap.



Photo 2

3. With a 3/32" Allen wrench, remove the three cover screws and the covers from both sides, set aside (photo 3).

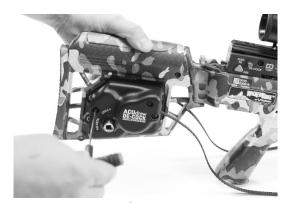


Photo 3

4. Remove the hub cover screw, star washer, hub cover, and friction washer from each side of the unit using a 3/32" Allen wrench (photo 4).

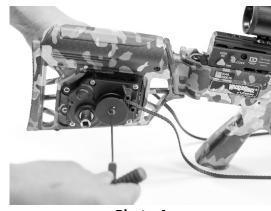


Photo 4

5. Without turning the crossbow on its side, remove the strap from each hub then set the old strap and claw aside (photo 5).

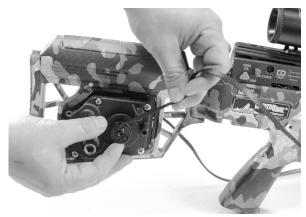


Photo 5

6. Place the new claw on the bowstring (photo 6).



Photo 6

7. Bring one side of the strap straight back toward the unit without twists in the strap. Make sure the tag end of the strap is facing up (photo 7).



Photo 7

8. Insert the strap into the axle slot and position the tag end into the recessed hole below the axle. Note: the tag end will be facing downward at this point (photo 8).

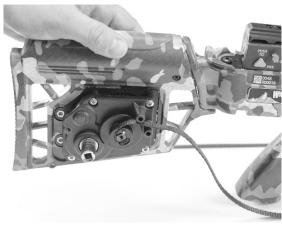


Photo 8

9. Repeat step 8 on the opposite side (photo 9).

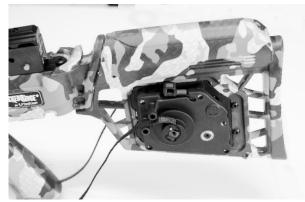


Photo 9

10. Position new friction washer over the center of the hub on both sides (photo 10).



Photo 10

11. Re-install hub cover over the hub pin, then slide new star washer on new hub cover screw, and insert them into the hub.

Tighten the screw with a 3/32" Allen wrench. Repeat on the opposite side (photo 11).

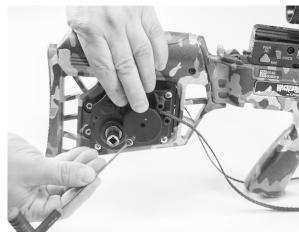


Photo 11

12. Verify that the strap is positioned between the strap guides on each side (photo 12).



Photo 12

13. Reinstall the unit's covers and tighten screws with a 3/32" Allen wrench (photo 13).

14. While holding the claw, extend it to take up slack in strap and loosen knob until you can retract the claw back into its storage position (photo 14).

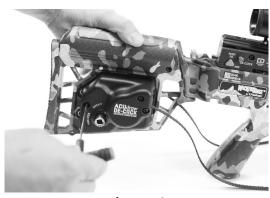


Photo 13



Photo 14