

## Picatinny Rail Crank Handle Holder Instructions (for use with 5" or 6" Fixed Crank Handles)

HCA-449

### Package Includes (Photos 1 & 1a):

One (1) Crank Handle Holder (top & bottom views shown)

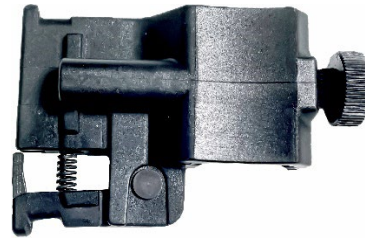


Photo 1

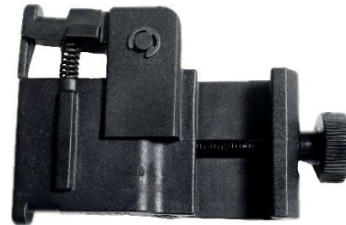


Photo 1a

1. Remove the Bow Hook using a T15 Torx wrench to remove the screw. Then slide the Bow Hook off of the Picatinny Rail (Photo 2).



Photo 2

2. Slide the Crank Handle Holder over the end of the Picatinny Rail then tighten the knurled knob with a 5/32" Allen wrench (Photo 3). Note: The Crank Handle Holder can be mounted on either the left or the right side of the crossbow.

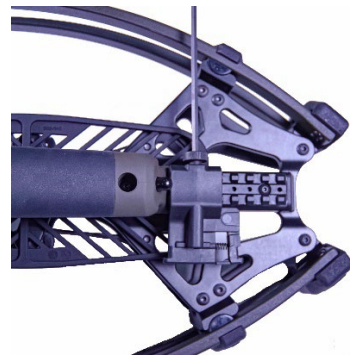


Photo 3

3. Slide the Bow Hook back onto the end of the Picatinny Rail. Use a T15 Torx wrench to reinsert its screw (Photo 4).

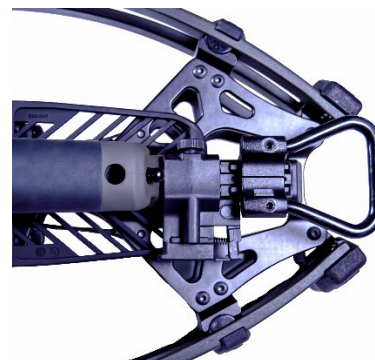


Photo 4