


## Alpha-Nock HP/HPX/ACU-X Snap-On Nock & Bushing Installation

To insert the new bushing, add glue (we use Point and Insert Glue or Loctite 454) to the aluminum bushing, and insert the nock/bushing assembly into the arrow while it is indexed correctly. Proper indexing is when the notch in the receiver is lined up with the odd color fletch on the arrow. Once the bushing goes in, it sets almost instantly so do it quickly.

Make sure while installing the nock into the bushing that the indexing features of both the bushing and the nock are aligned to the cock vane (see diagram below).

Once all three are aligned and the nock is seated into the bushing, you can stand the arrow up and press it in up against a hard surface.

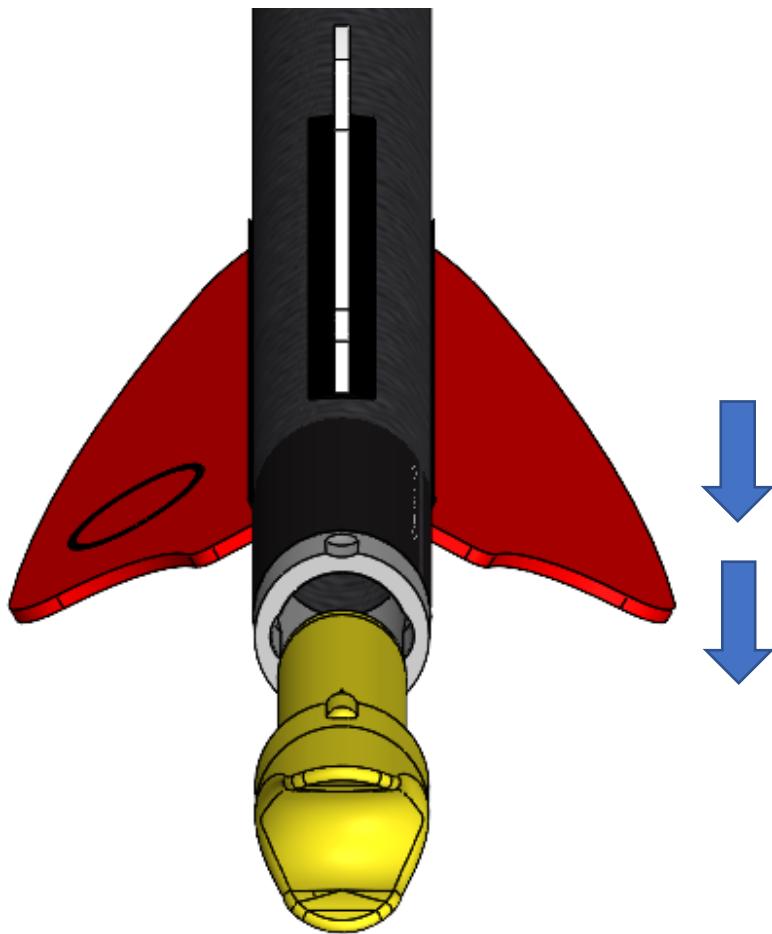

Continue to follow all the proper guidance for installing the Alpha-Nock, Alpha-Nock HPX, or ACU-X Snap-On Nock including checking your alignment of your vane in the bow; making sure the arrow is properly seated and checking your nock and shaft for damage before each shot.