


## Alpha HP Nock Installation

To insert the new aluminum bushing, add glue (we use Loc-tite 454) to the aluminum bushing, and insert the nock/bushing assembly into the arrow while it is indexed correctly. Once the bushing goes in, it sets almost instantly so do it quickly.

Make sure while installing the nock into the bushing that the indexing features of both the aluminum bushing and the nock are aligned to the cock vane (see diagram below).

Once all 3 are aligned and the nock is started into the bushing. You can stand the arrow up and press it in up against a hard surface.

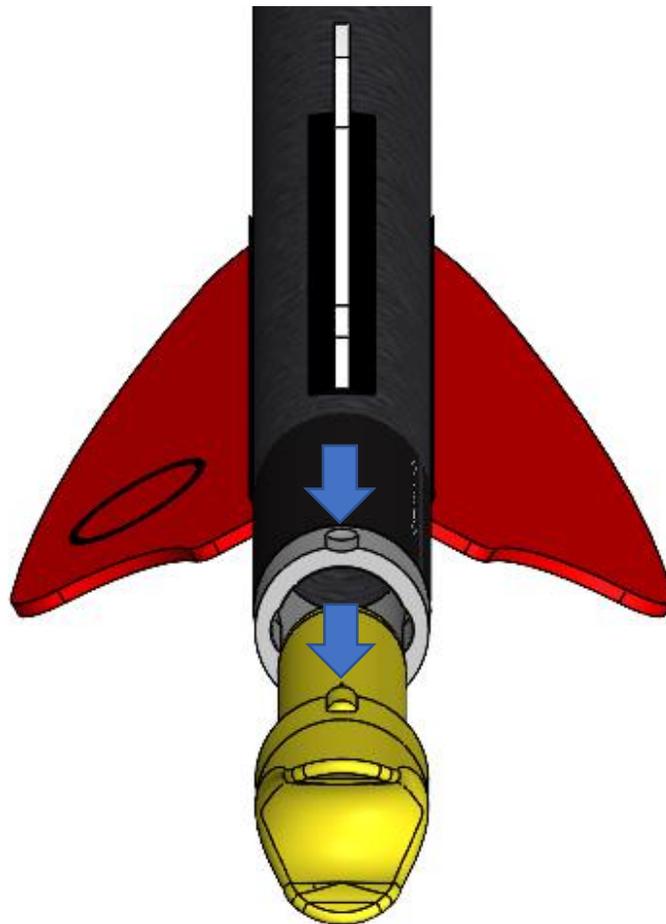

Continue to follow all the proper guidance for Alpha-Nocks, including checking your alignment of your vane in the bow, making sure the arrow is properly seated, and checking your nock and shaft for damage before each shot.